

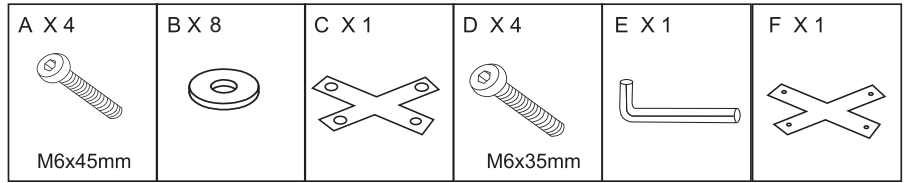



sofaforma
ASSEMBLY INSTRUCTIONS
MODEL NO.:LUCA

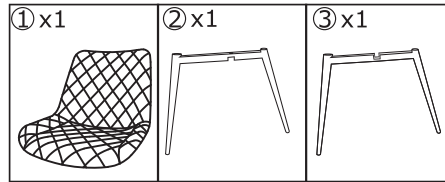


1

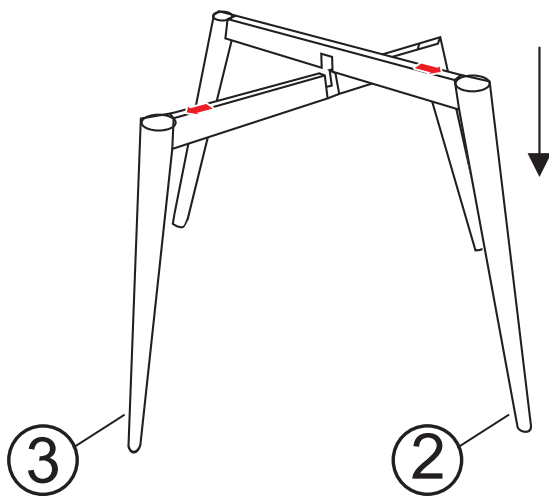

2

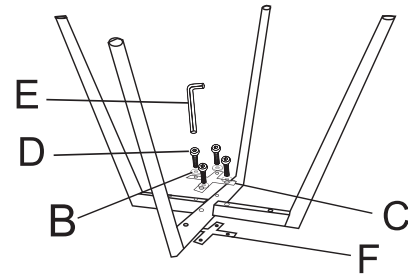

3

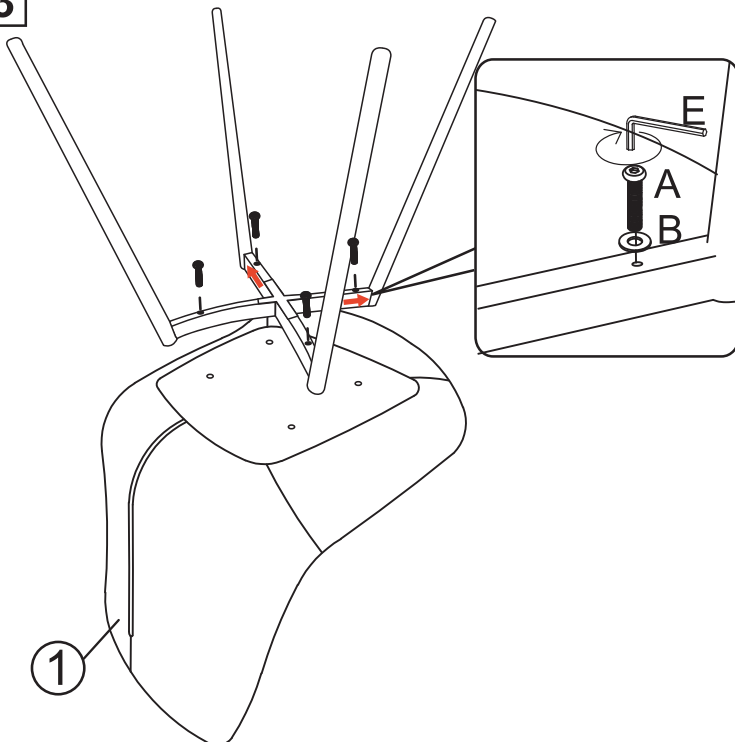

4

Put the chair onto flat place ,
 fully tight all the screws after
 well adjusted flatness of the
 chair.

MAX BEARING WEIGHT : 120KGS

