
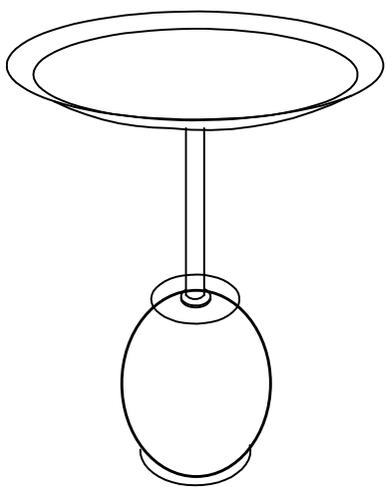
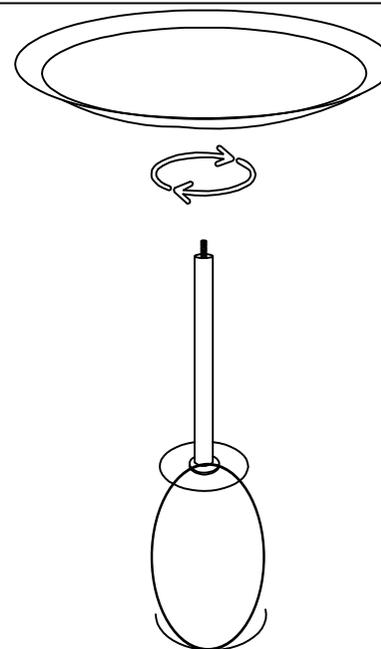
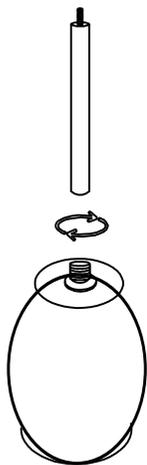


**sofaforma**  
ASSEMBLY INSTRUCTIONS  
MODEL NO.:TOPAZ



A		1
B		1
C		1