
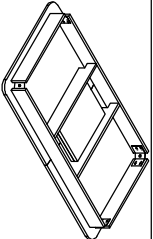





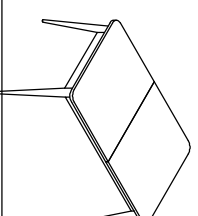



## Montaj Elemanlari

PART NO	TRACK NAME	QTY	PICTURE
1	TABLE BODY	1	
2	TABLE LEG	4	
3	CYLINDER NUT	4	
4	M8*50cm STUD	4	
5	M8 NUT	4	
6	M8 SPRING WASHER	4	
7	NAILED POLYGRIDE	4	




75\*120  
BUTTERFLY  
TABLE



1 PERSON

### ATTENTION PLEASE!!!


- IN ORDER TO PREVENT YOUR PRODUCT BEING OUT OF THE SCOPE OF WARRANTY, YOU MUST INSTALL IT IN ACCORDANCE WITH THE INSTALLATION DIAGRAM.
- SPREAD ALL THE MATERIALS IN THE PACKAGE ON A FLAT FLOOR TO AVOID ANY DIFFICULTY IN ASSEMBLY.
- BEFORE STARTING INSTALLATION, CHECK THE MATERIALS AND THEIR QUANTITIES SPECIFIED IN THE INSTALLATION DIAGRAM.
- PERFORM THE INSTALLATION ON THE PRODUCT PACKAGING CARTON OR ON A FLAT SURFACE THAT WILL NOT SCRATCH THE PRODUCT.
- ONE 16-17 KEY IS ENOUGH FOR INSTALLATION. DO NOT USE ELECTRICAL TOOLS.
- FOR YOUR QUESTIONS AND OPINIONS ABOUT INSTALLATION, PLEASE CONTACT OUR AUTHORIZED DEALER.

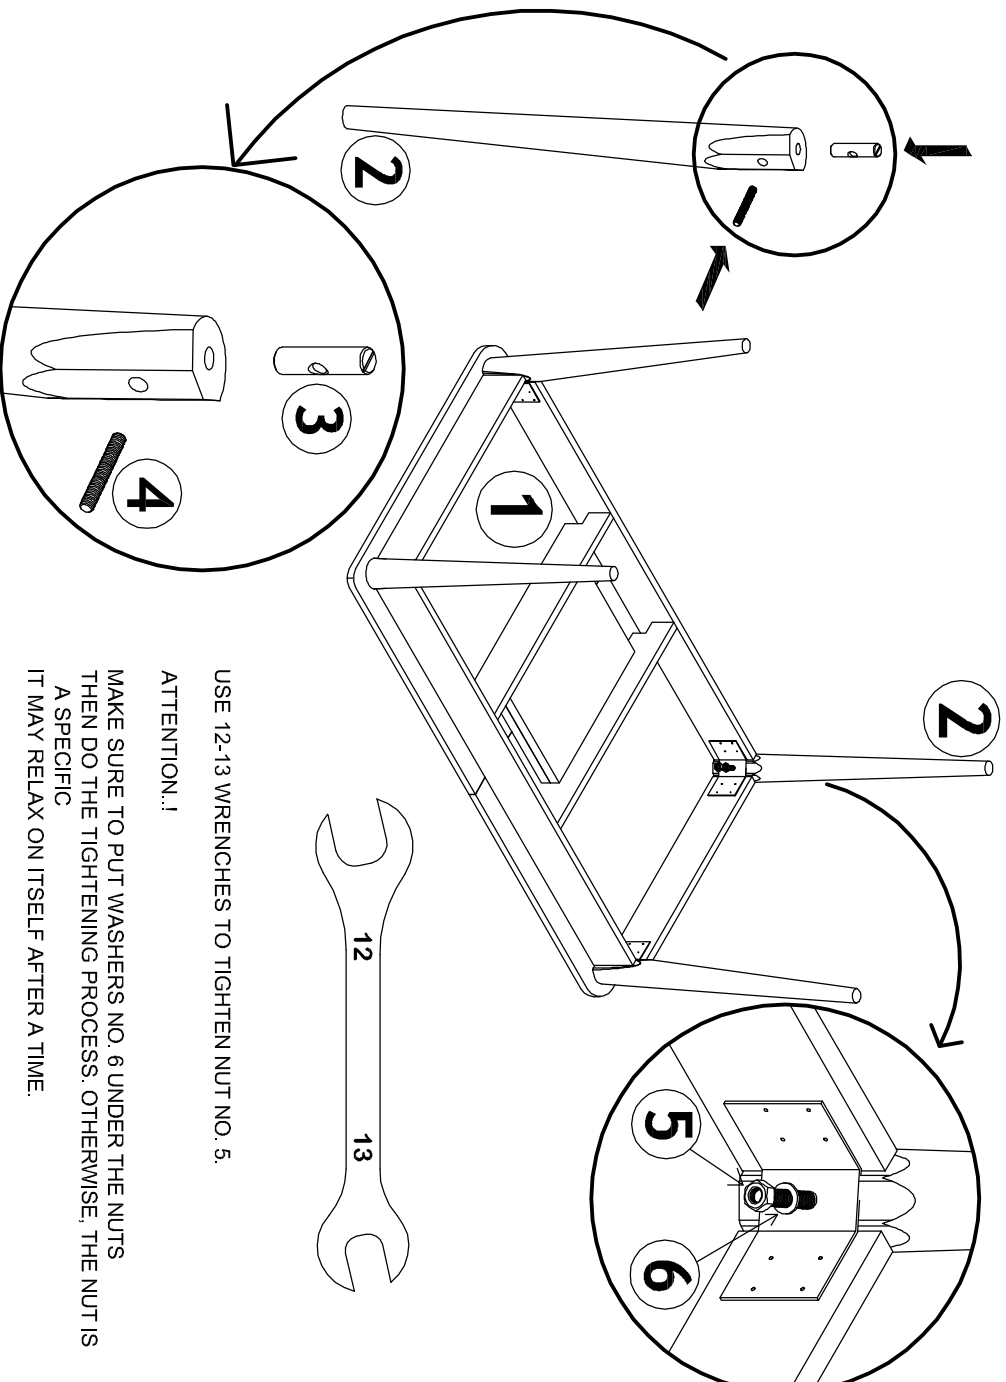

USE 12-13 WRENCHES TO TIGHTEN NUT NO. 5.

ATTENTION.!!

MAKE SURE TO PUT WASHERS NO. 6 UNDER THE NUTS THEN DO THE TIGHTENING PROCESS. OTHERWISE, THE NUT IS A SPECIFIC IT MAY RELAX ON ITSELF AFTER A TIME.

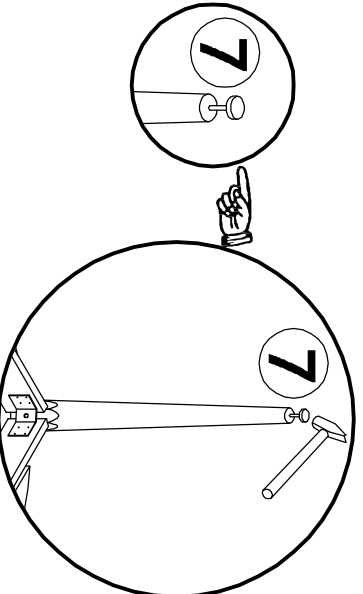

AFTER THE FOOT ASSEMBLY PROCESS IS COMPLETED, CAREFULLY SLOWLY NAIL THE NAILED SHOES NUMBER 7 TO THE CENTER OF THE WOODEN FOOT.