


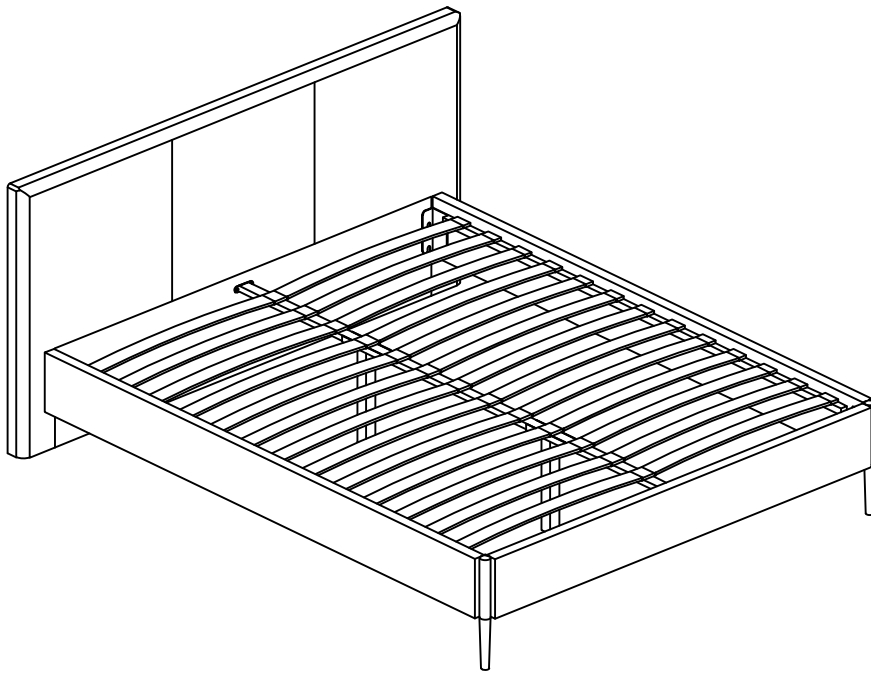








sofaforma

ASSEMBLY INSTRUCTIONS

FOR DOLLY



AX16 M8*30 	BX4 M8*35 	CX4 M8 	DX12 M8 	EX12 M8 
FX1 	GX1 	HX2 	IX2 	JX1 