

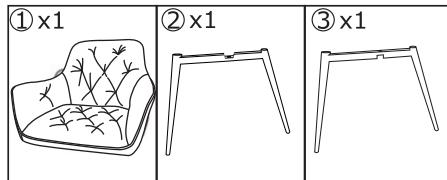


**sofaforma**  
ASSEMBLY INSTRUCTIONS  
MODEL NO.:BONA

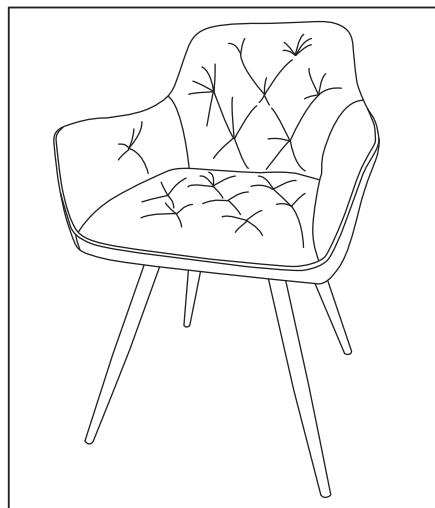


A X 4 M6X50	B X 4 6*16*1.5	C X 1 	D X 4 M6X10	E X 1 M5
----------------	-------------------	-----------	----------------	-------------


**1**

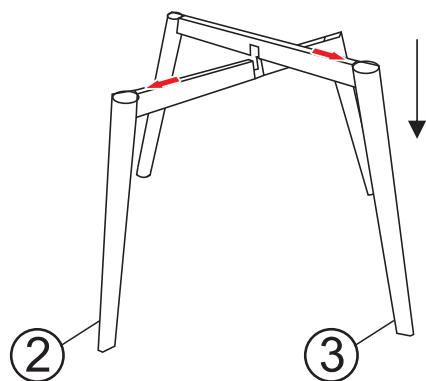

**2**

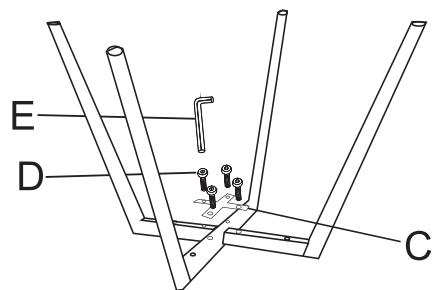

**3**

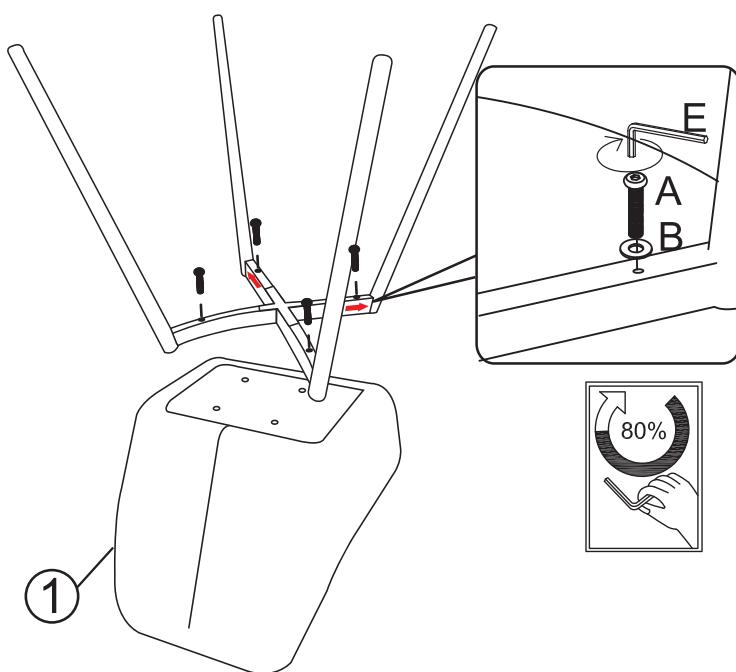

**4**

Put the chair onto flat place ,  
fully tight all the screws after  
well adjusted flatness of the  
chair.

MAX BEARING WEIGHT : 120KGS

