
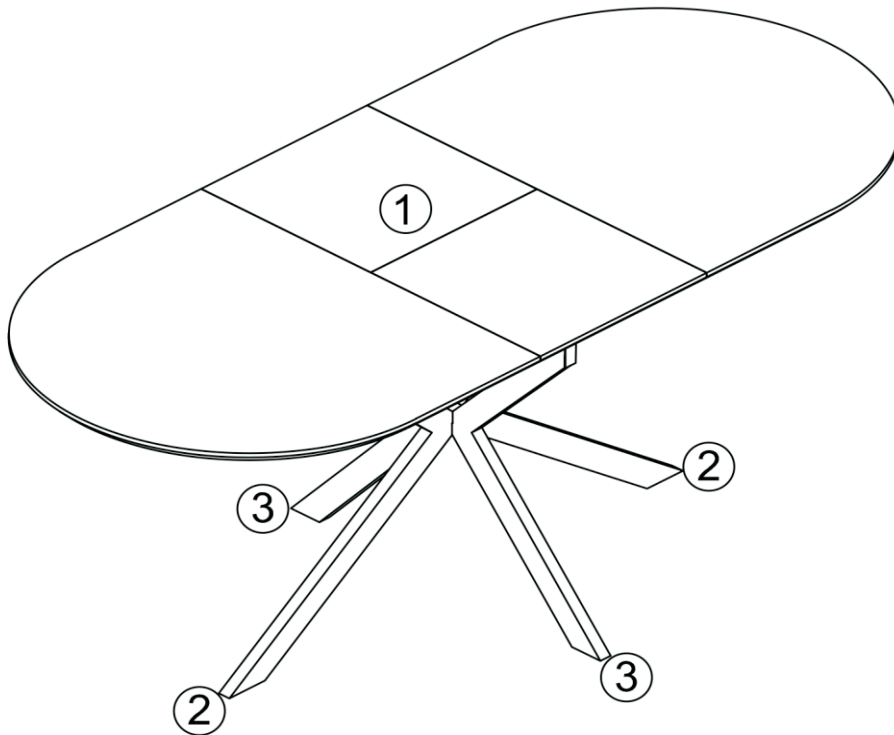
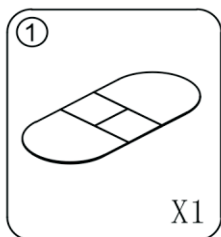
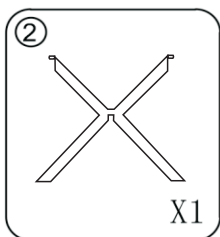
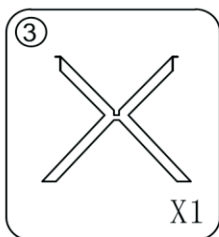
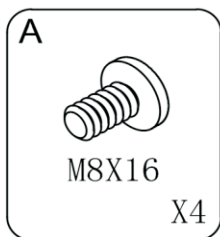
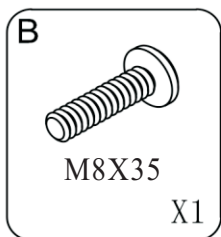
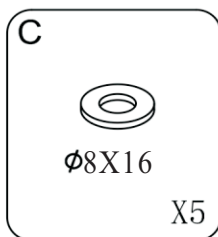
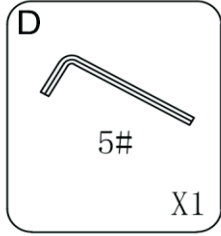
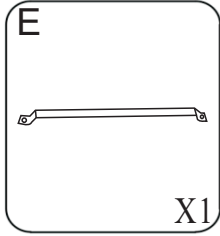





# sofaforma

ASSEMBLY INSTRUCTIONS  
MODEL NO.:AGUSTIN



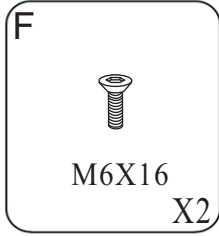


 <p>① X1</p>	 <p>② X1</p>	 <p>③ X1</p>	 <p>A M8X16 X4</p>	 <p>B M8X35 X1</p>	 <p>C Ø8X16 X5</p>
 <p>D 5# X1</p>	 <p>E X1</p>	 <p>F M6X16 X2</p>			




1.

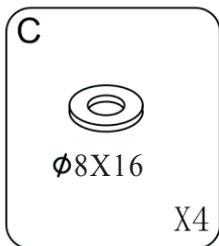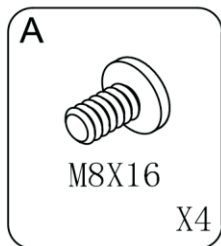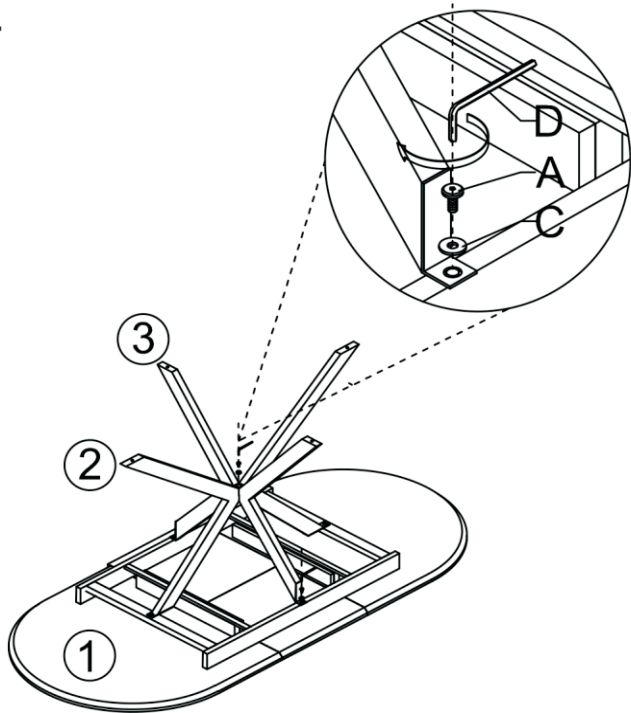

2.

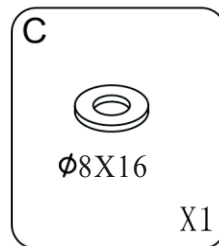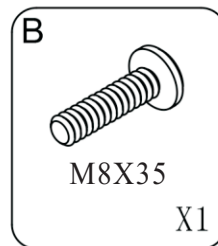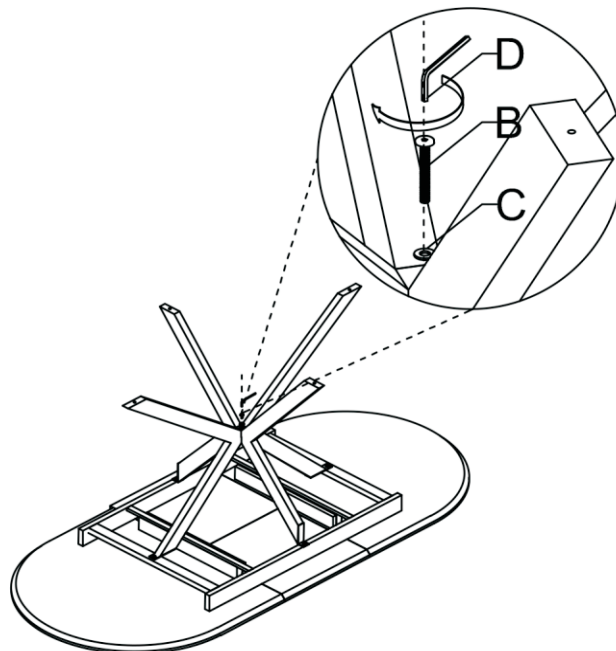

3.

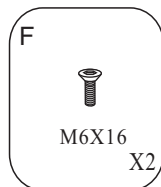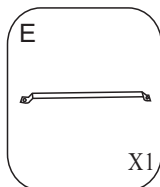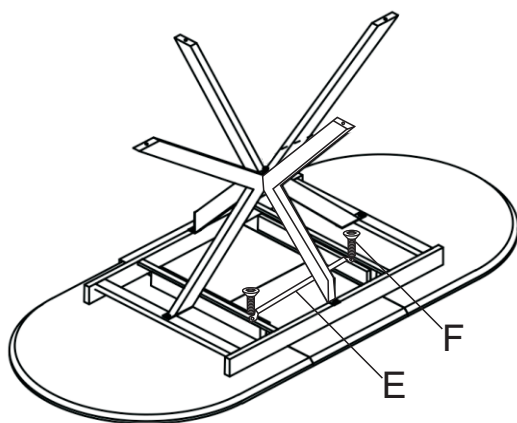

4.

