



sofaforma


ASSEMBLY INSTRUCTIONS
MODEL NO.:BURTON

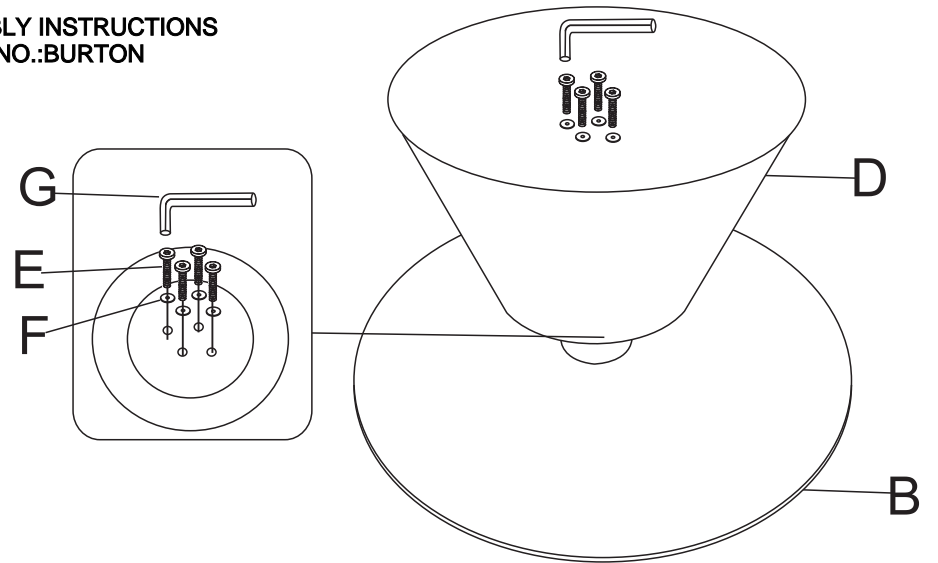


Ax1




Bx1

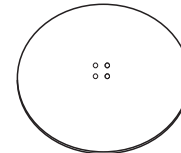

Cx1



Dx1

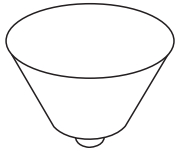

Ex8



Fx8



Gx1

