
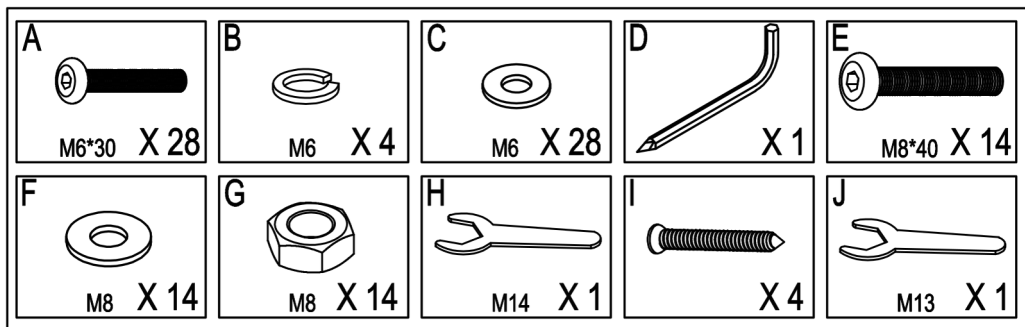
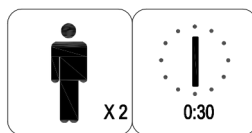
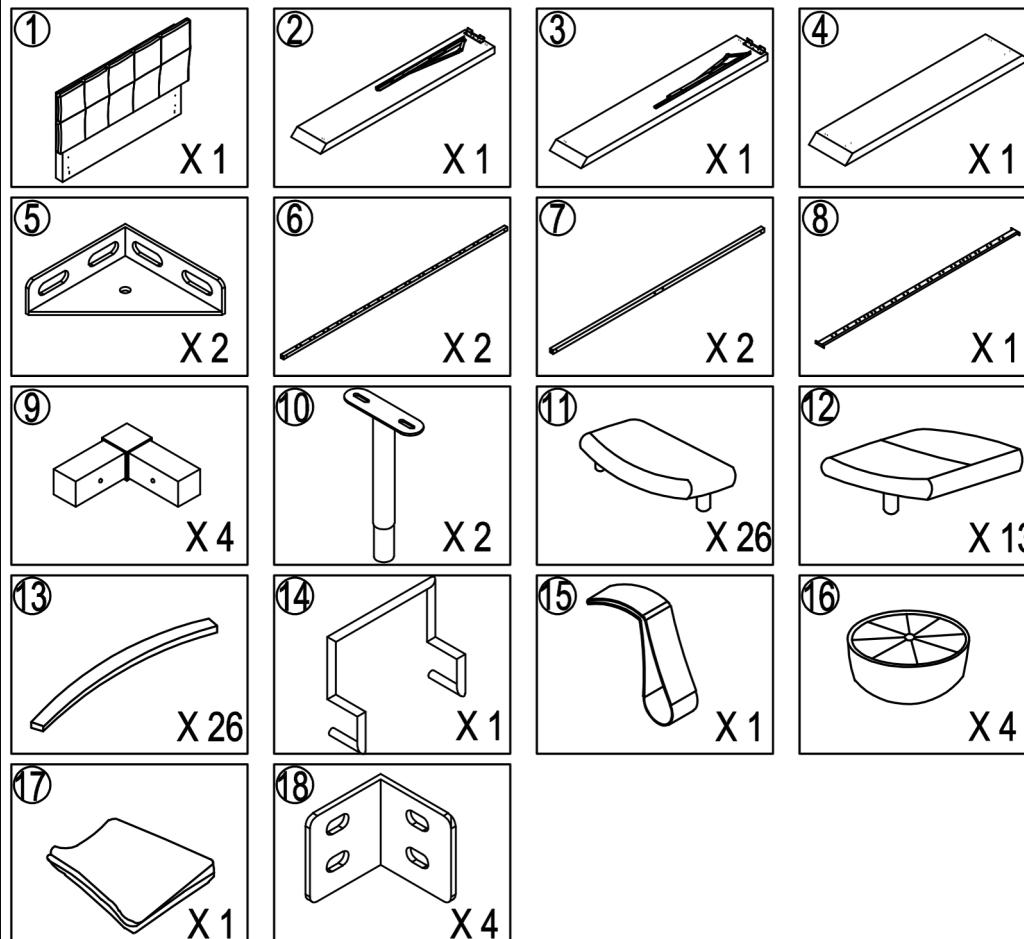



sofaforma

ASSEMBLY INSTRUCTIONS


MODEL#: EMRYS

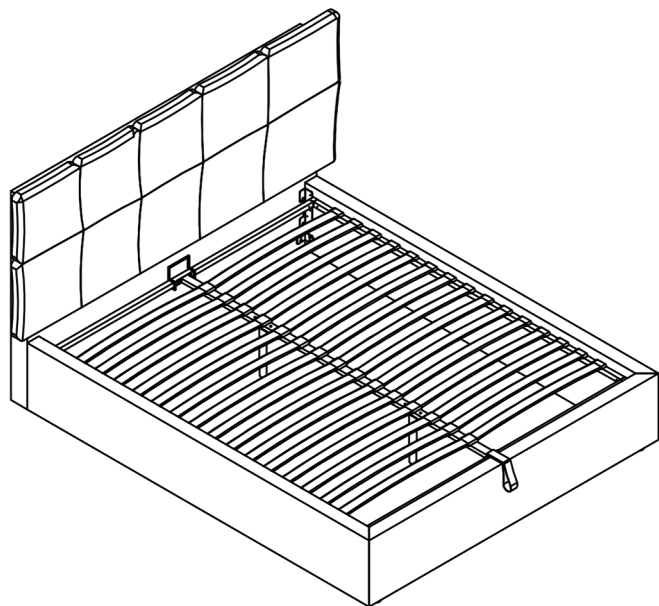



1

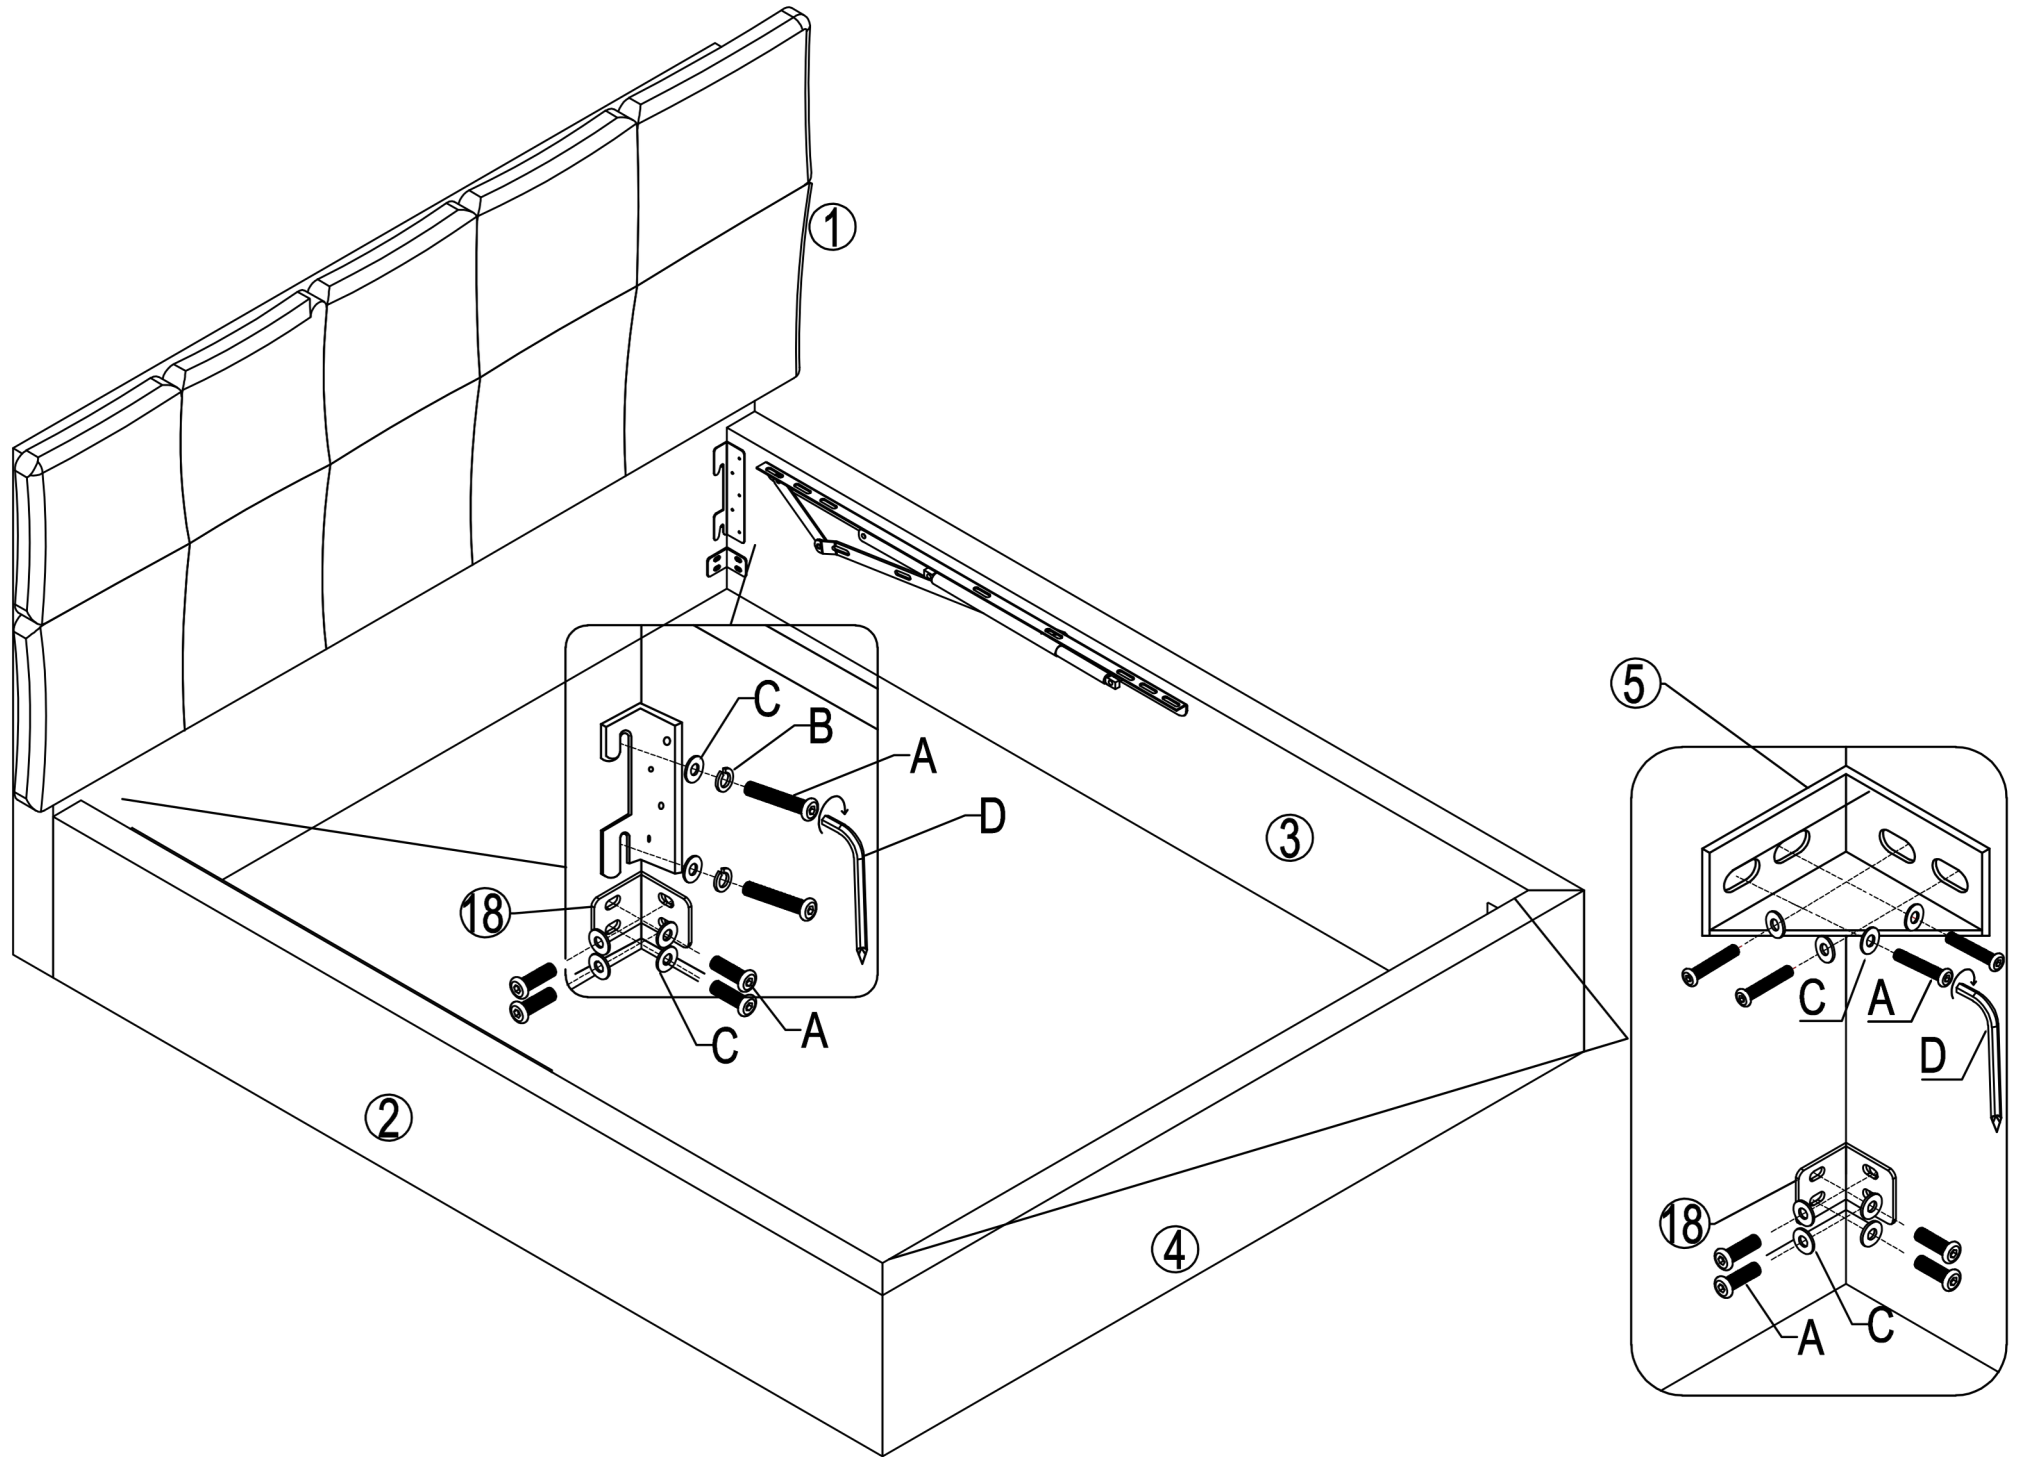


2

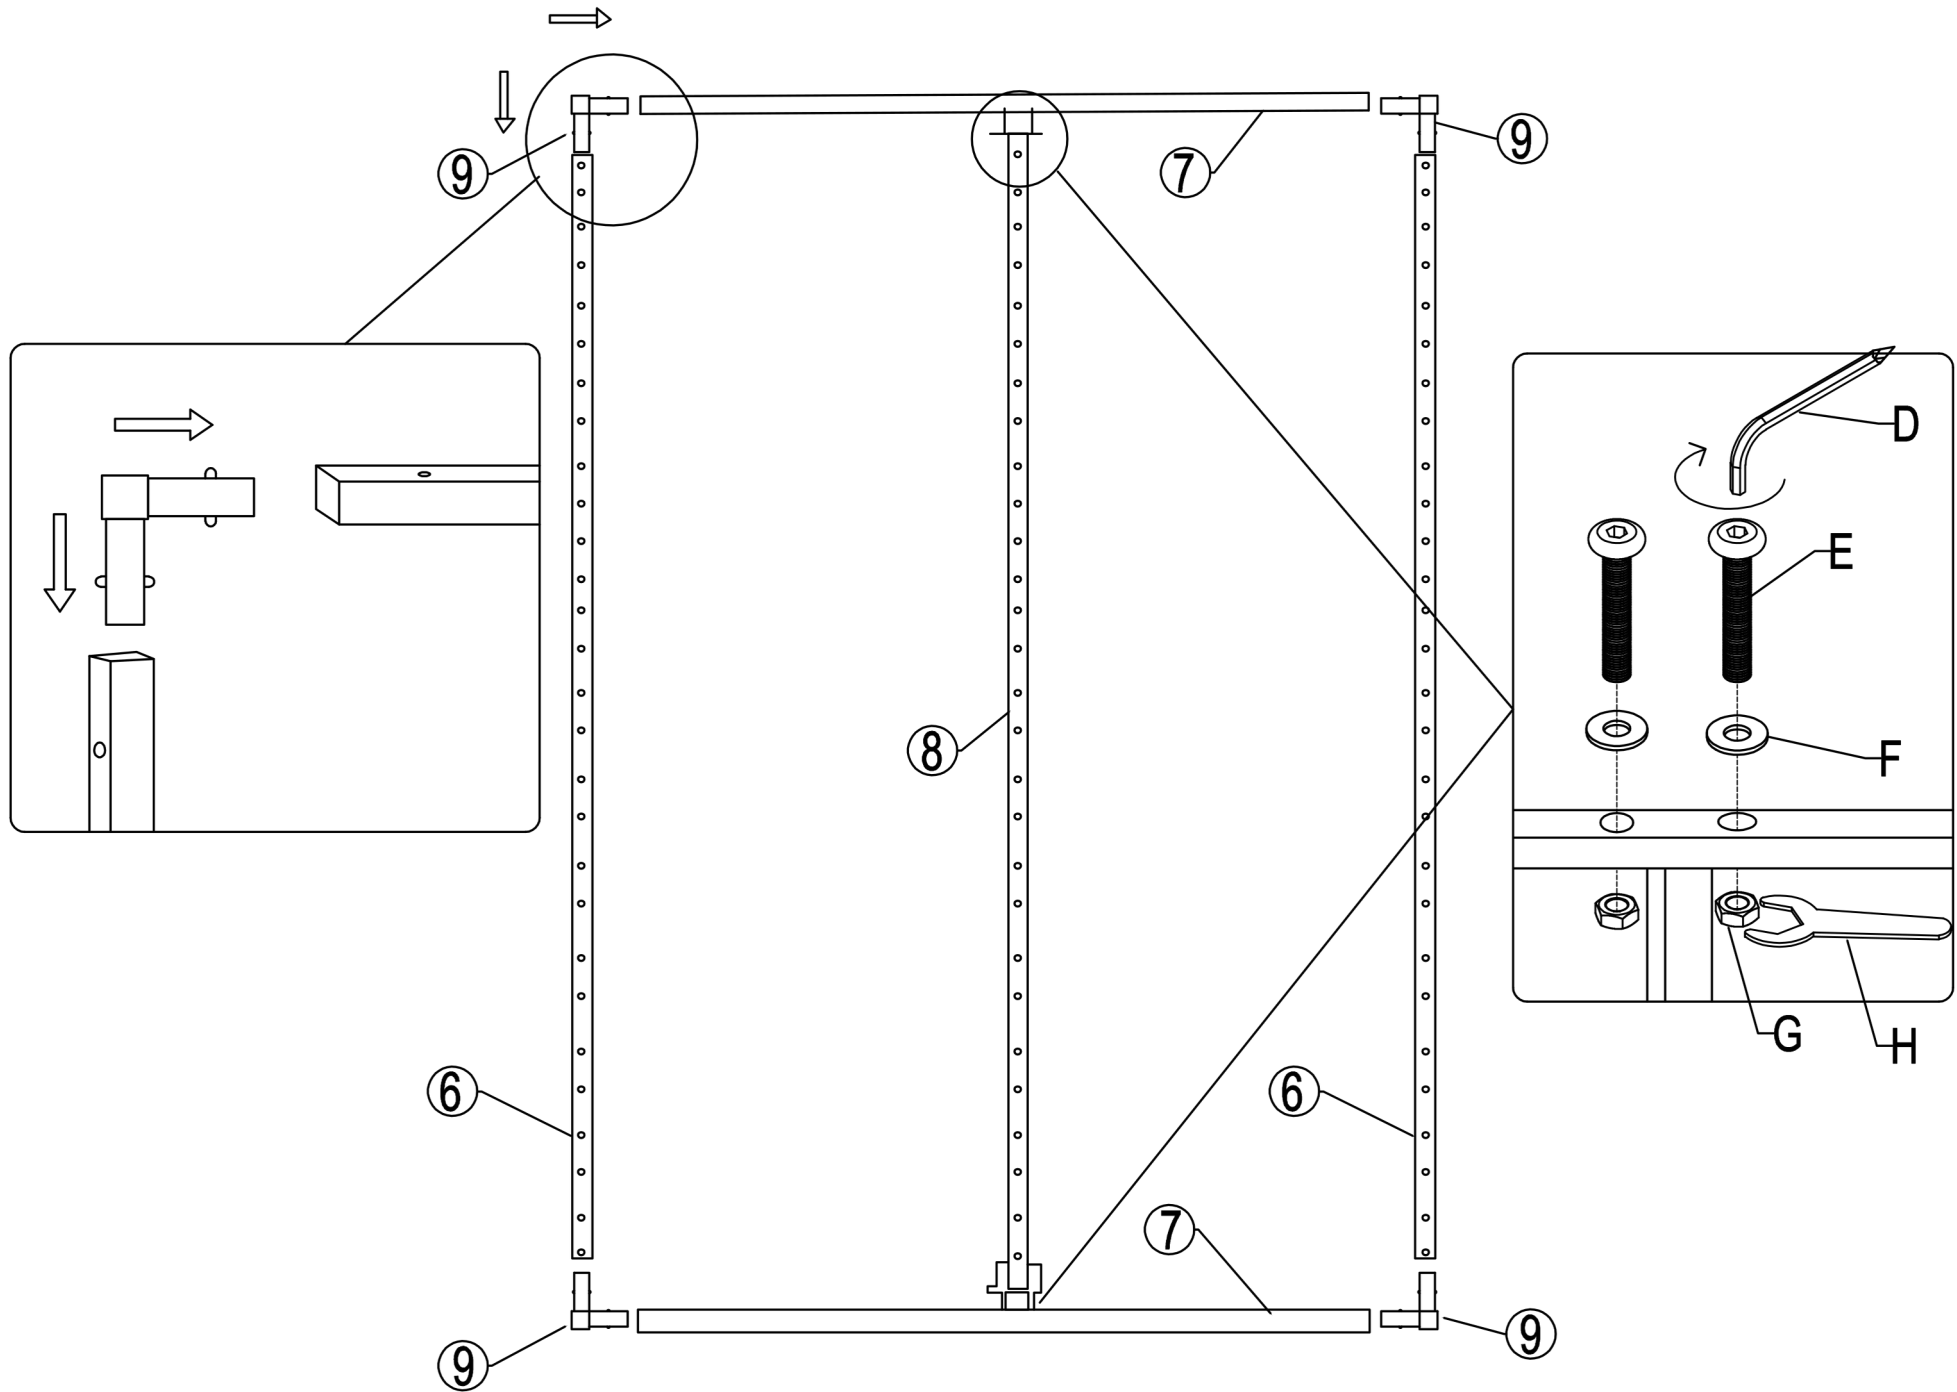


Torsion Bolt

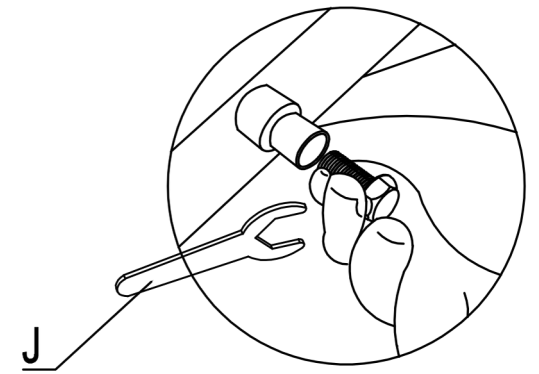
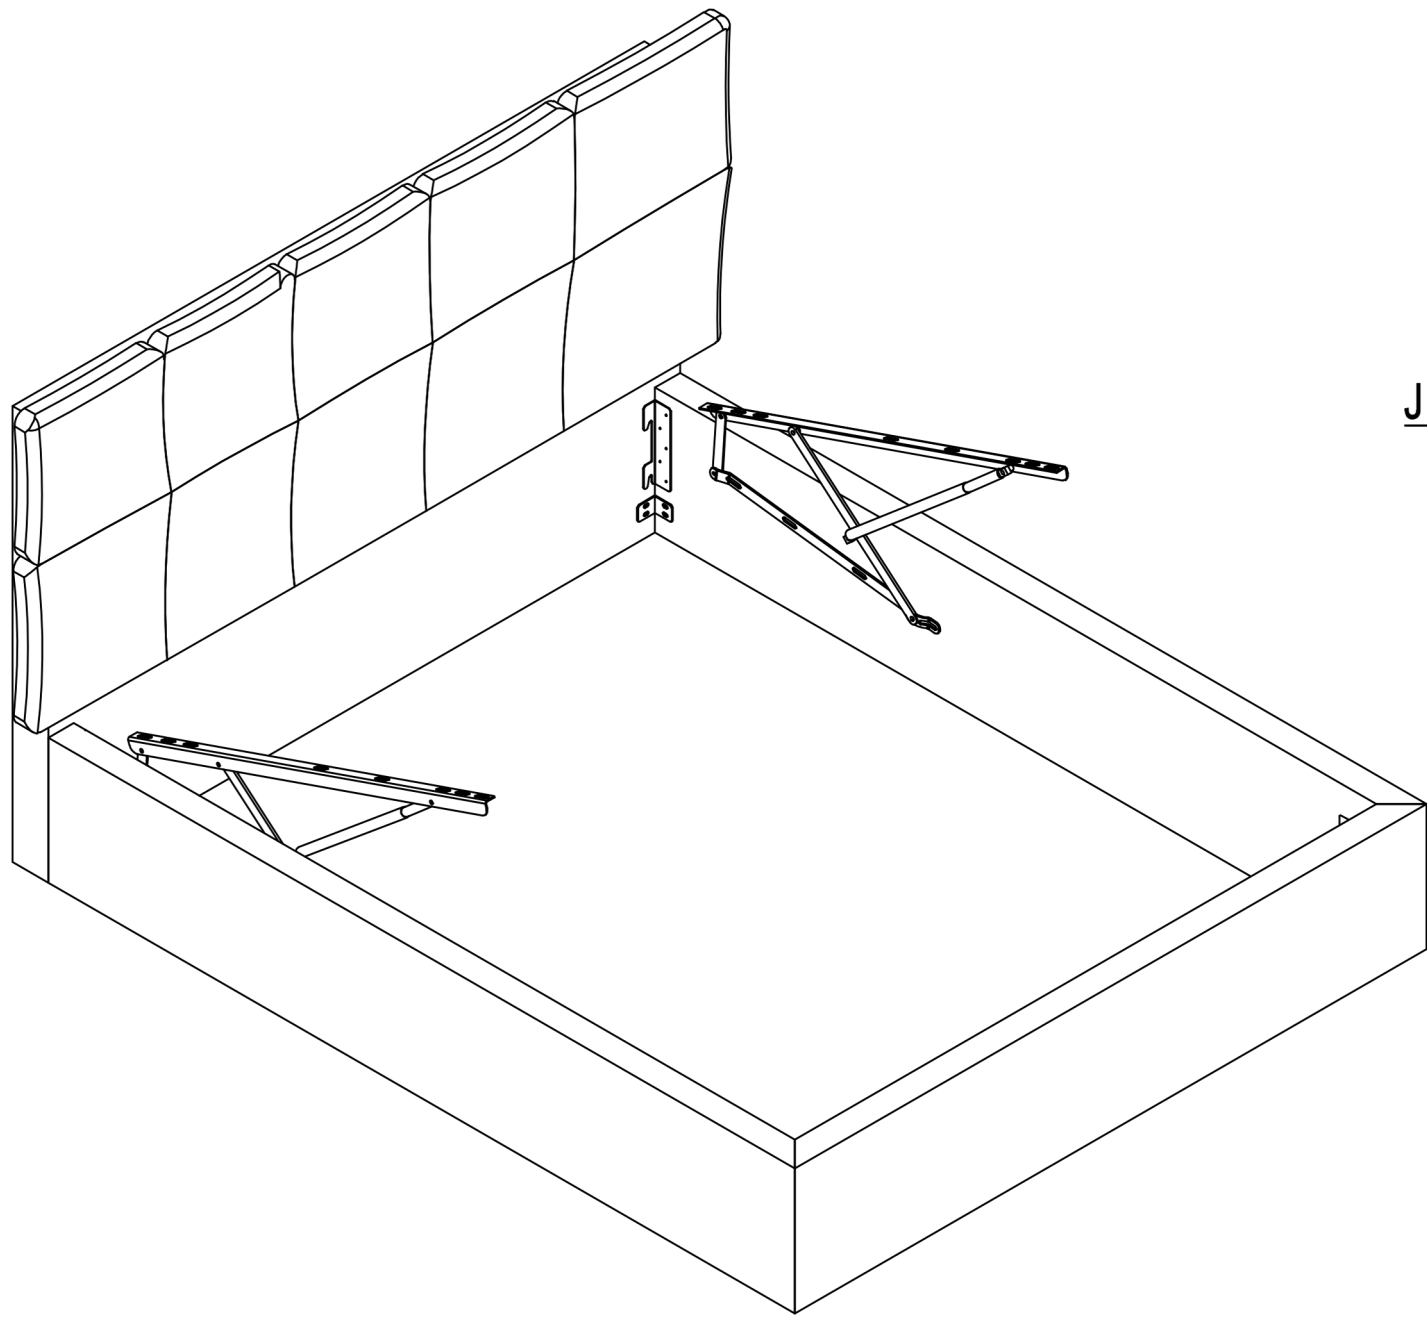


To place the pneumatic rods

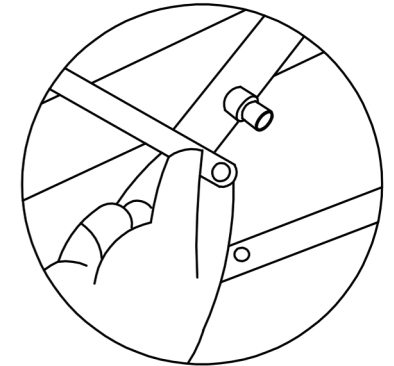


Tighten the screw

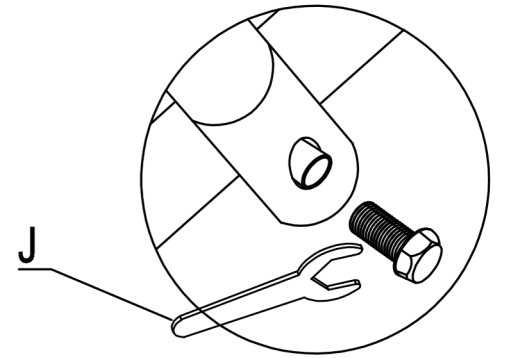

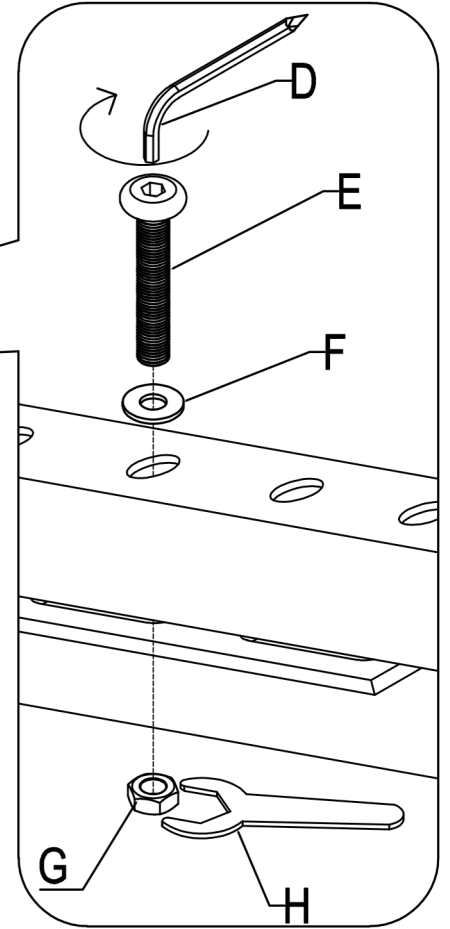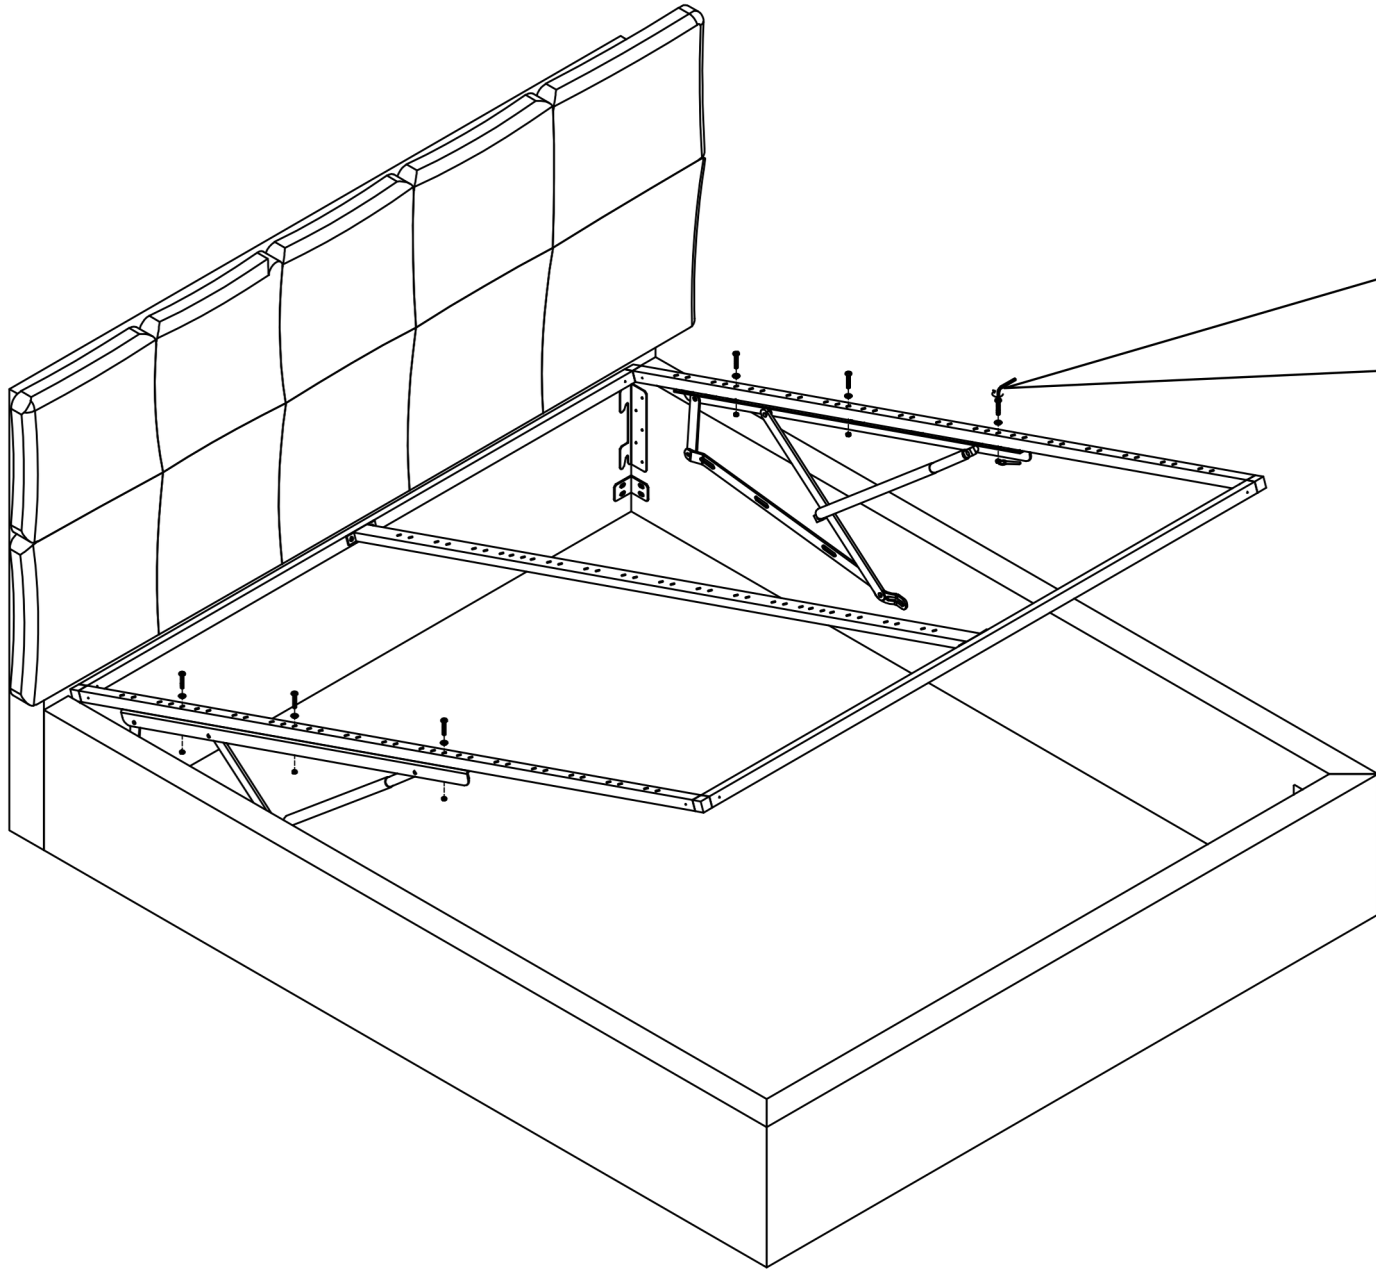

5

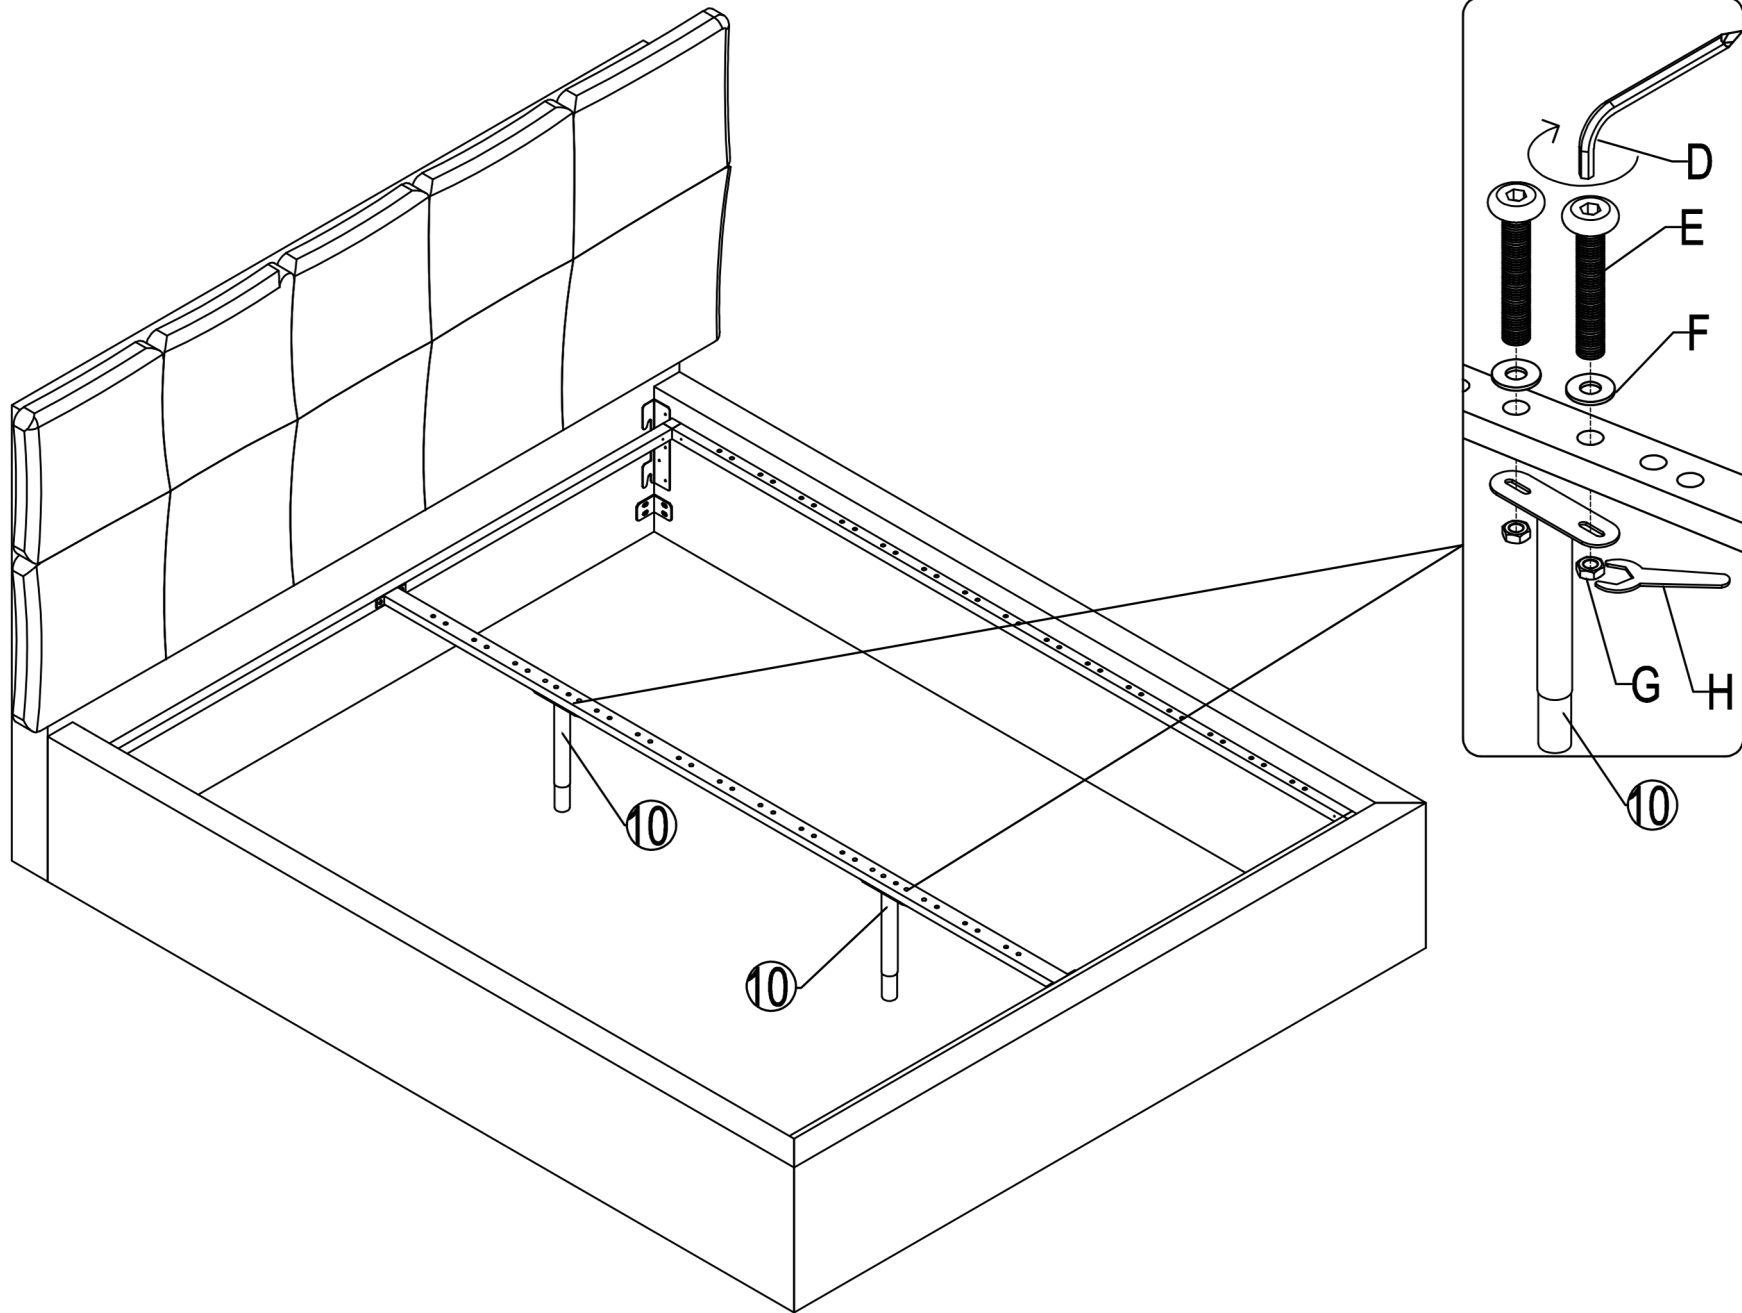

6

