

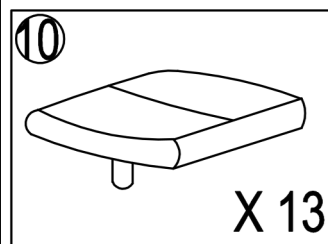
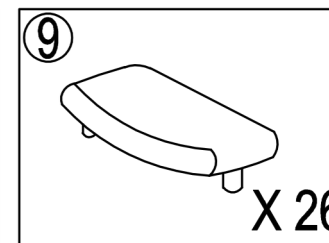
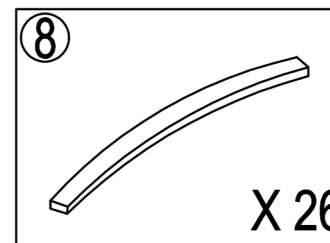
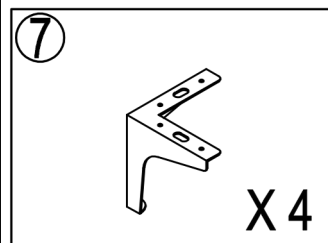
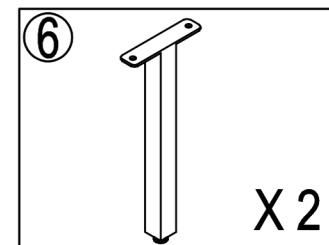
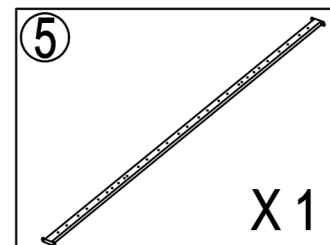
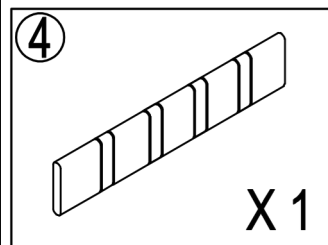
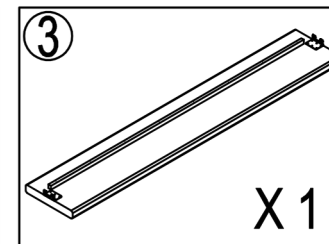
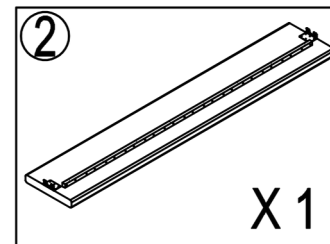
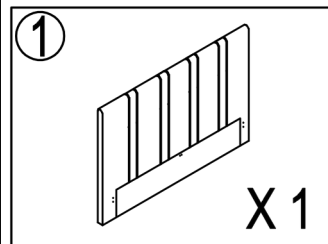


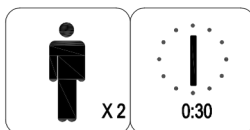


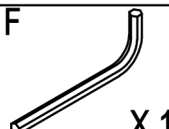


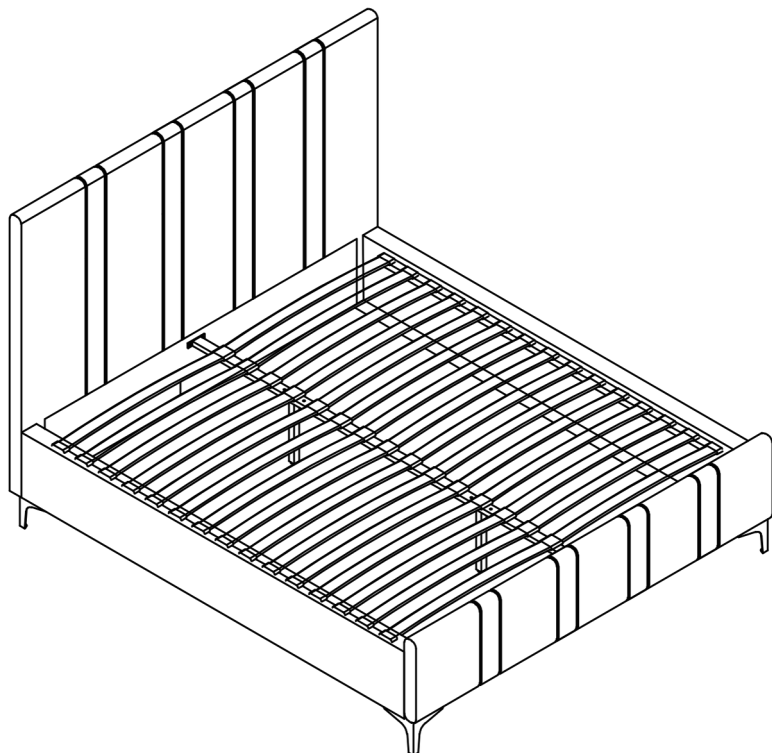



sofaforma ASSEMBLY INSTRUCTIONS

MODEL#: FREESIA




A  M8*30 X 20	B  M8*35 X 4	C  X 8	D  X 8	E  M8 X 4
F  X 1	G  X 1	H  M4*22 X 16	I  X 1	





1




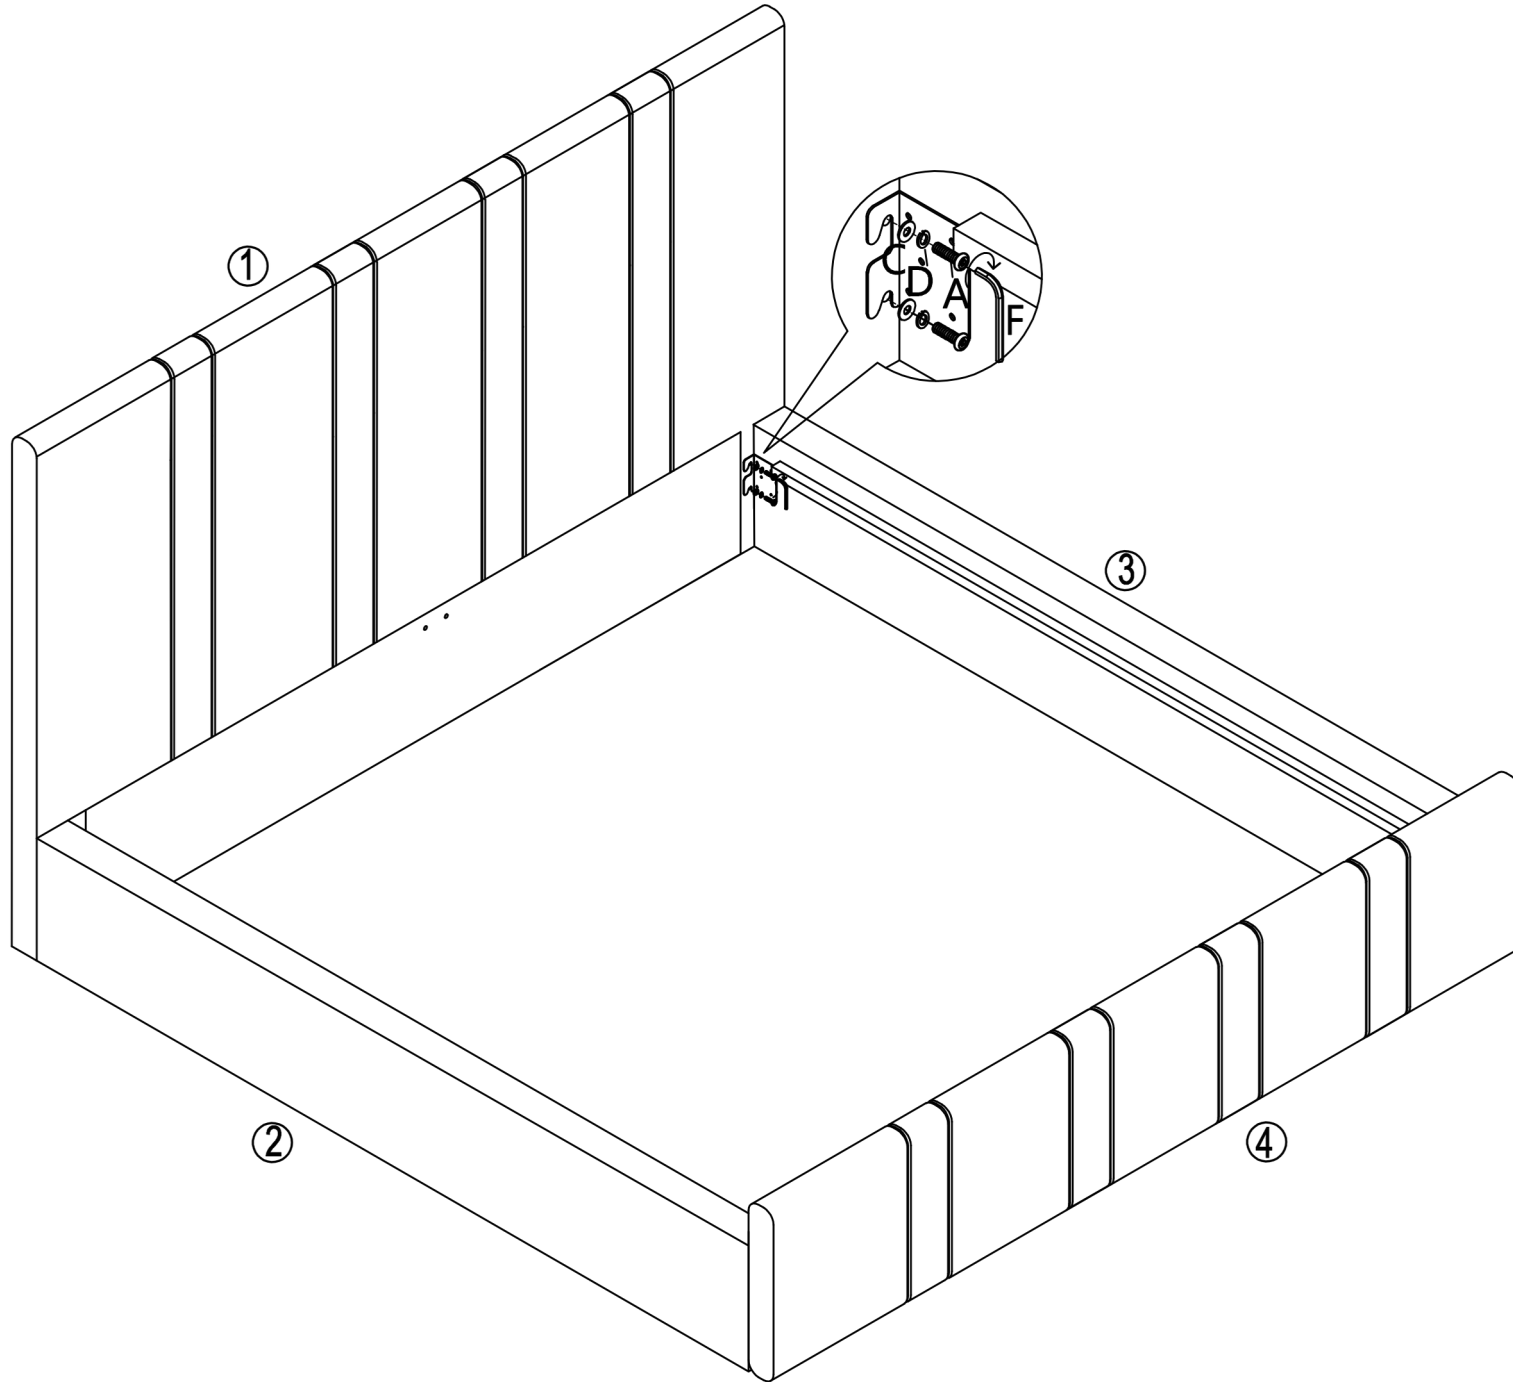


2

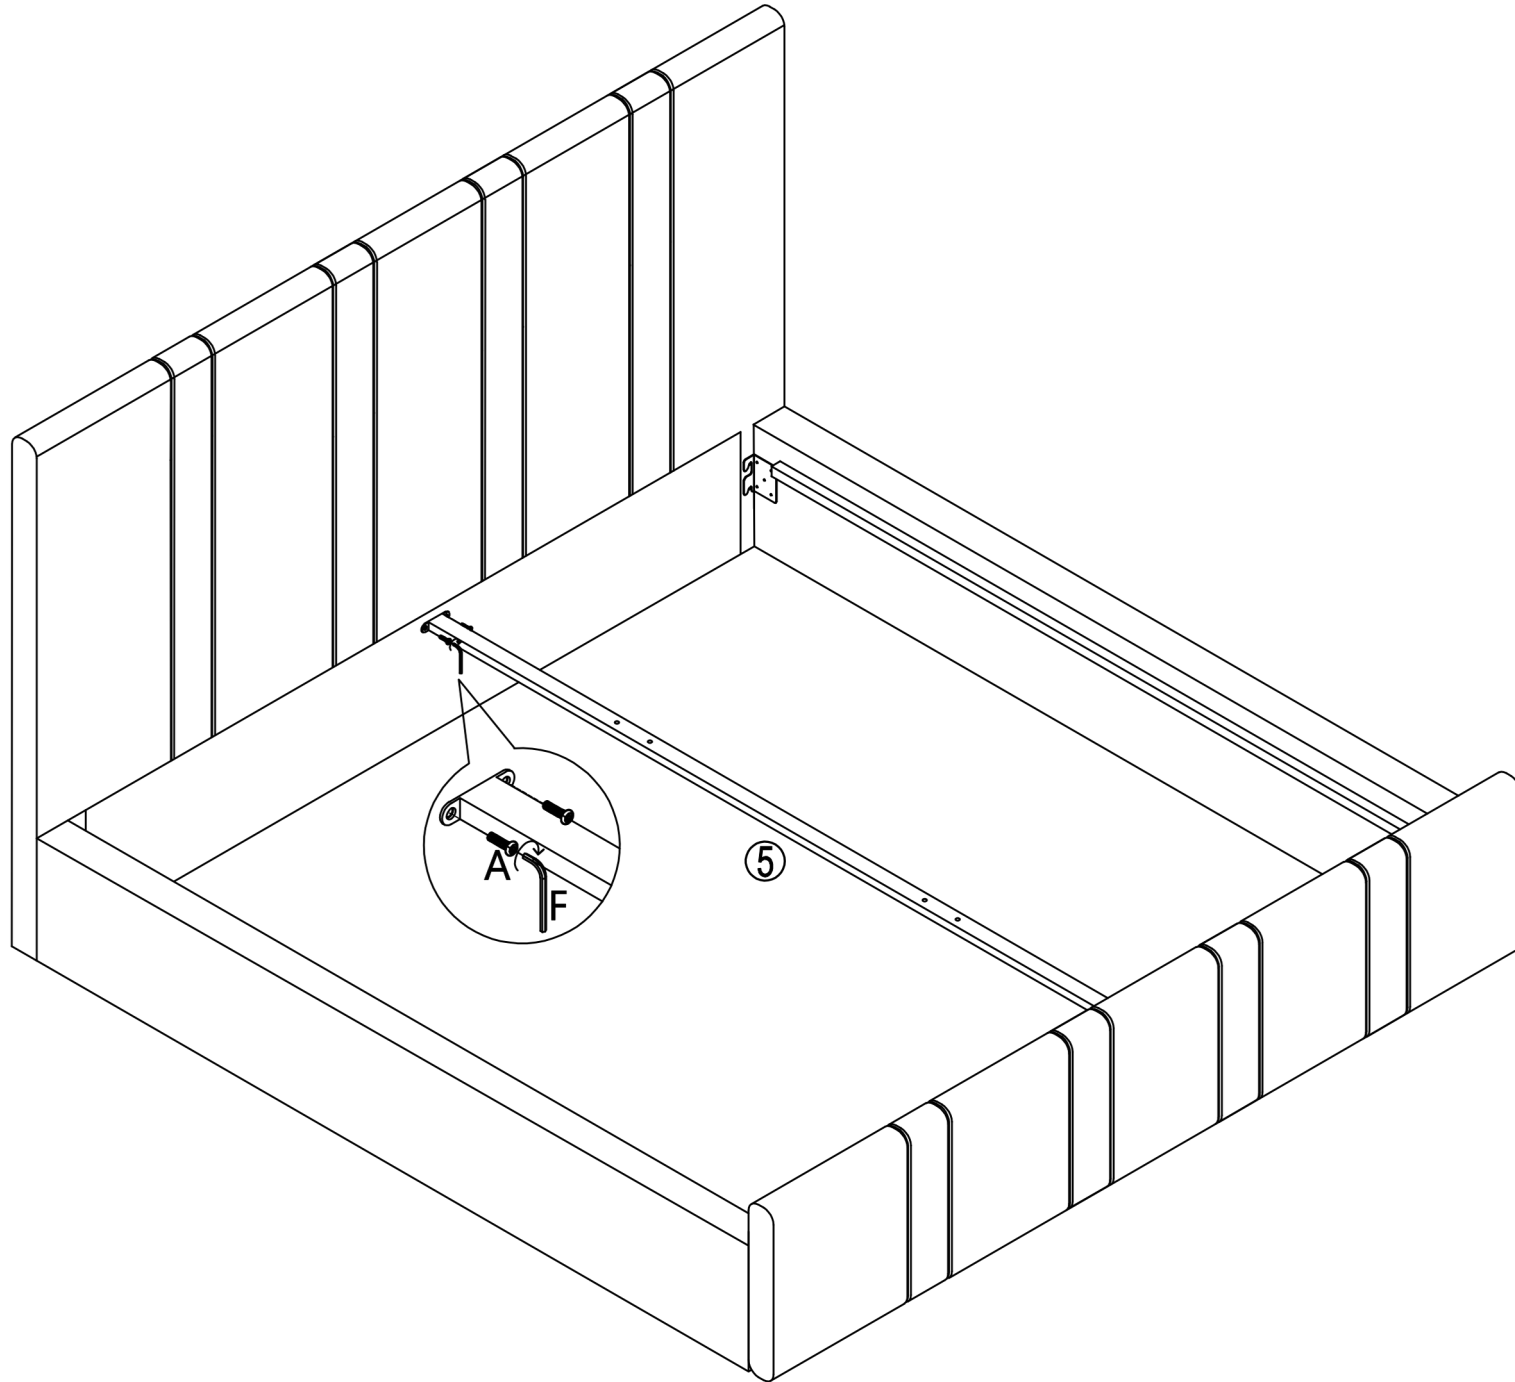

3

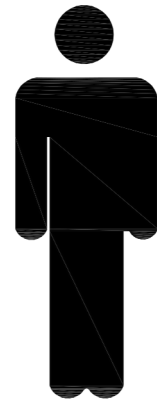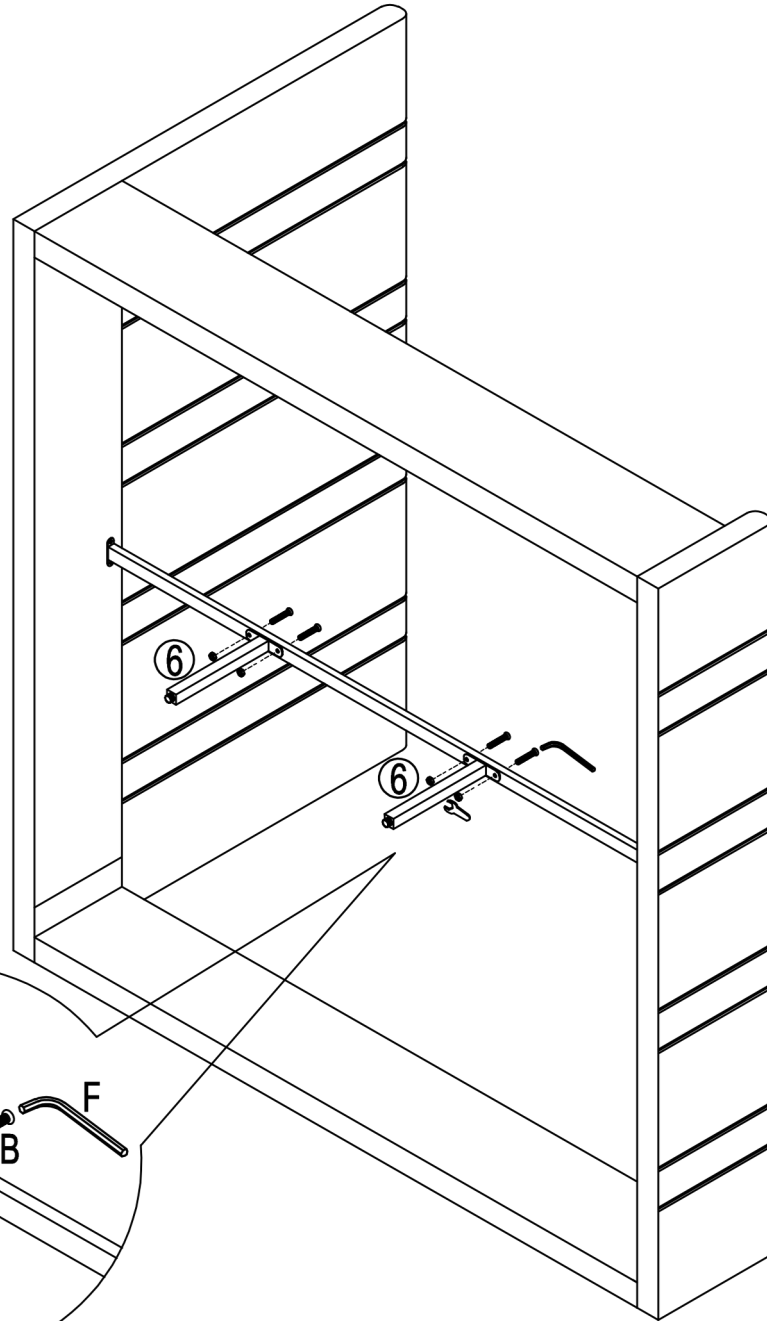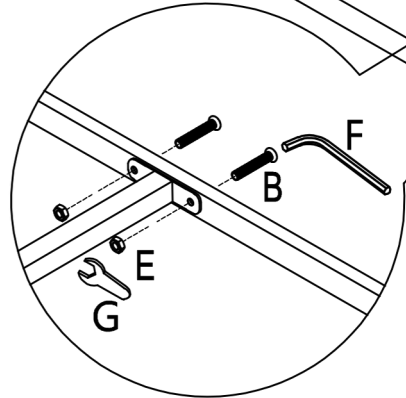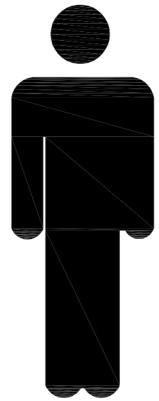

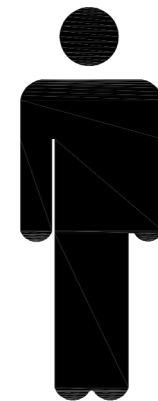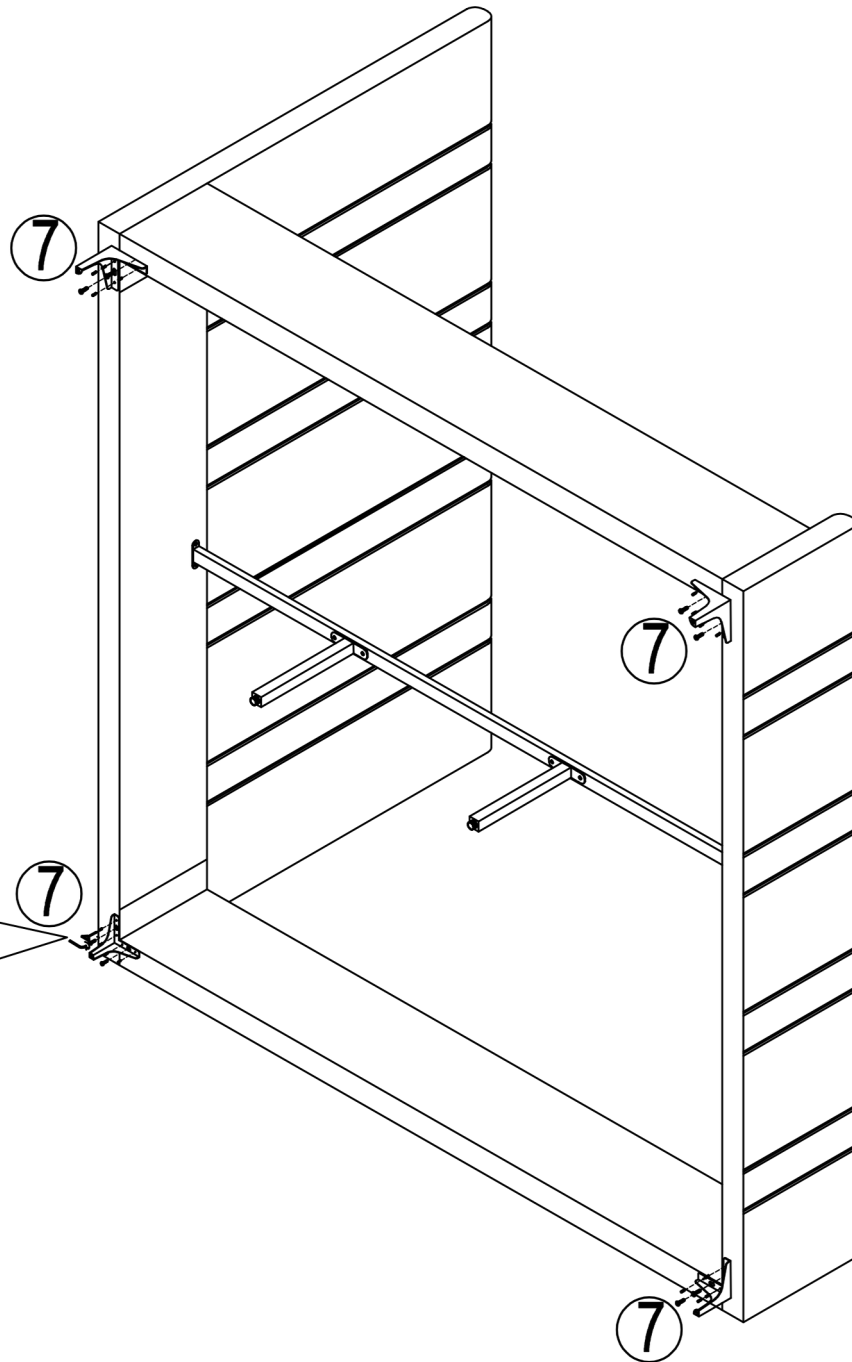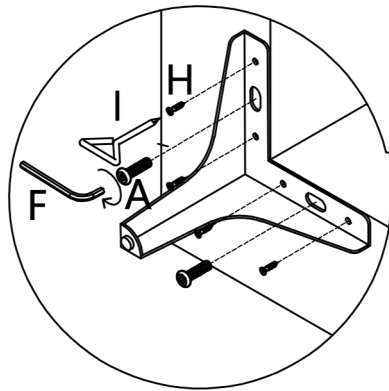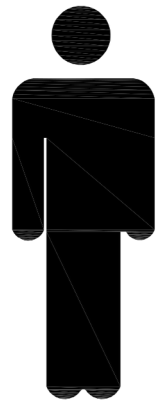

5

