



1

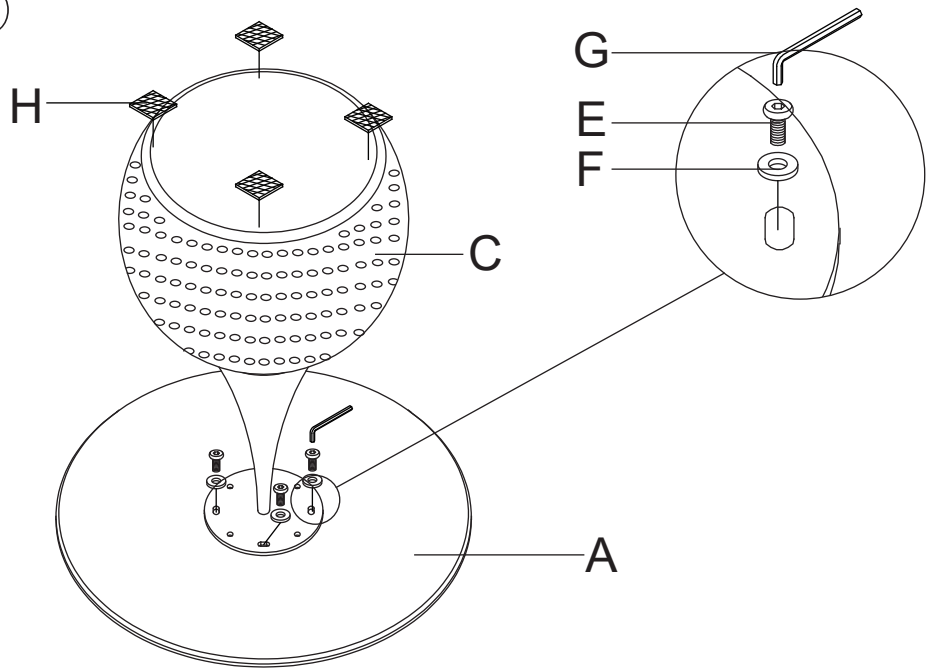


2


**sofaforma**  
 ASSEMBLY INSTRUCTIONS  
 MODEL NO.: PUKET

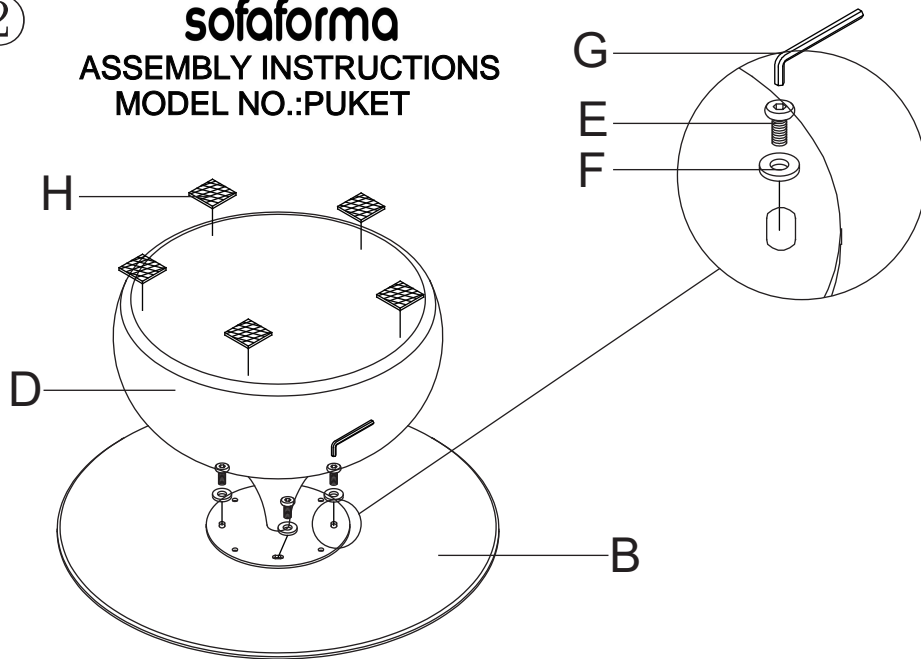


3

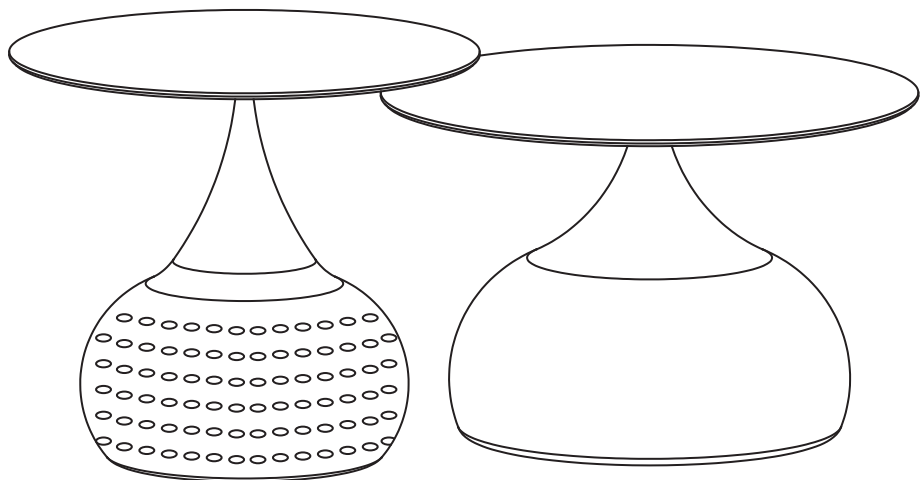


Ax1




Bx1

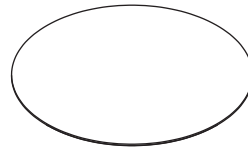

Cx1

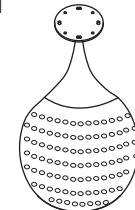

Dx1

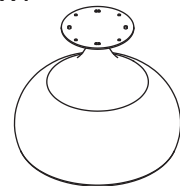


Ex8



Fx8



Gx1



Hx9

